 
 


Selecting the Default Paper Tray on the Ricoh SP5300 Printer


1) Press the **MENU** button on the control panel

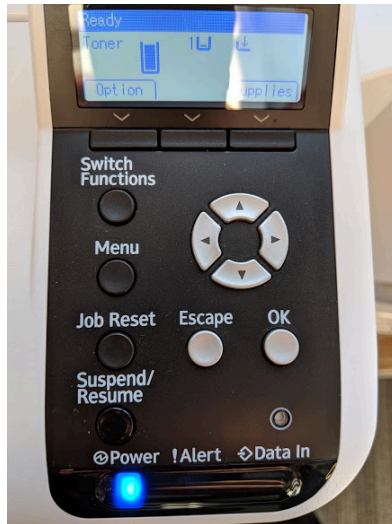

2) Press the **Down Arrow** to **Paper Input**. Press **OK**

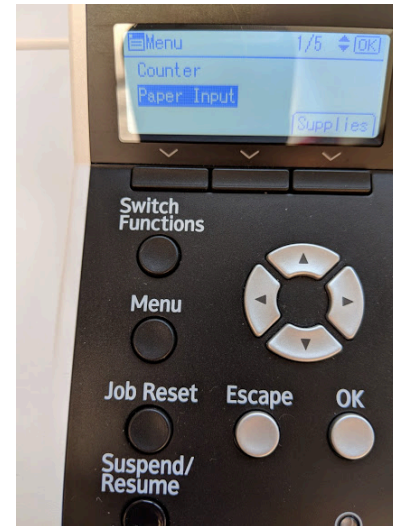

3) Press the **Down Arrow** to the last setting - **Tray Priority**.

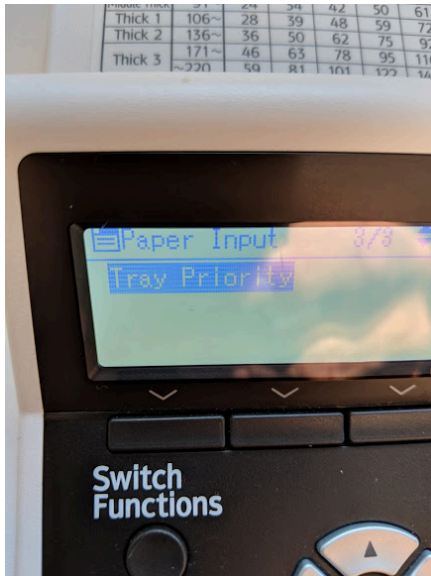

4) Select **Bypass Tray** and press **OK**. The bypass tray has now been set as the Default paper tray. Press **Menu** to exit.

